


W 1 = WIDTH OF CONSTRUCTION JOINT
W 2 = 1/2 WIDTH OF W 1
W 3 = 1 TO 2 INCHES

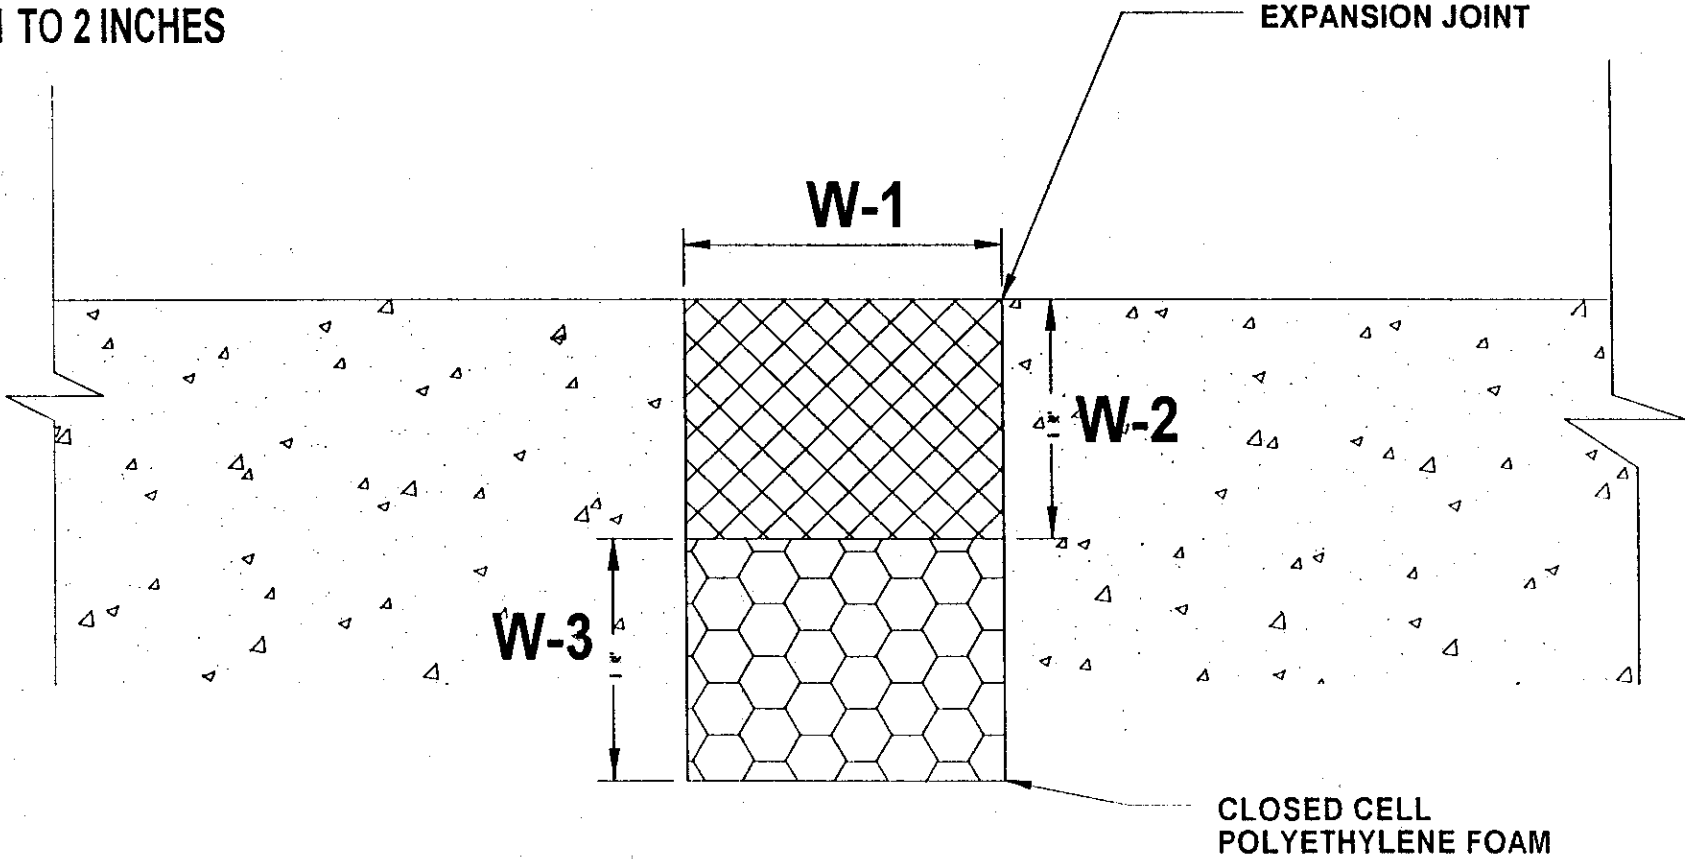

PREPARATION OF EXPANSION JOINTS
IN CONCRETE FLOORS

ECD-1012



1450 Hoff Industrial Drive
O'Fallon, MO 63366
636-379-9119 fax 636-379-0388
www.blome.com e-mail info@blome.com